

Operating Instructions Portable CD Player

SL-CT345 SL-CT350 SL-CT352

Note:
"EB" on the packaging indicates the United Kingdom.



EB EG GN SG (En)



Dear Customer
Thank you for purchasing this product.
Before connecting, operating or adjusting this product, please read these instructions completely. Please keep this manual for future reference.

Specifications

Audio (CD-DA)
Sampling frequency: 44.1 kHz
No. of channels: 2 (left and right, stereo)
Frequency response: 20 Hz to 20,000 Hz (+0.5 dB to -7 dB)
Headphone output level: RMS max. 6 mW+6 mW/16 Ω (adjustable)

Pickup
Light source: Semiconductor laser
Wavelength: 780 nm
(NORSK)
Bølgelengde 780 nm
Laserstyrke
Ingen farlig stråling sendes ut (med sikkerhets-beskyttelse)

General
Power supply:
SL-CT345 DC input (via AC adaptor, not included): DC 4.5 V
SL-CT350 SL-CT352 DC input (via included AC adaptor): DC 4.5 V

AC adaptor input:
(The United Kingdom)
AC 220-240 V 50/60 Hz
(Continental Europe)
AC 220-230 V 50/60 Hz
(Australia and N.Z.)
AC 230-240 V 50 Hz
(Sets purchased in Japan)
AC 110-127 V/220-240 V 50/60 Hz

SL-CT350 SL-CT352
Power consumption:
Using AC adaptor: 0.8 W
Recharging: 3.0 W

Play time:
Using on a flat stable surface at 25 °C, EQ is off, Hold is on and Anti-skip is on POS 1 (CD-DA). Play times are in hours and approximate.

Batteries used	Play time
2 alkaline batteries (LR03)	26
2 alkaline batteries (LR6)	60
4 alkaline batteries (2 LR03+2 LR6)	86
2 optional rechargeable batteries (Europe: HHR-4AGE/2B Other areas: HHR-4AGT/2B)	16
2 optional rechargeable (Europe: HHR-4AGE/2B Other areas: HHR-4AGT/2B) and 2 alkaline (LR6) batteries	76

Recharging time: About 3.5 to 4.5 hours
● The play time may be less depending on the operating conditions.
● Play time will be considerably reduced when playing CD-RW.
Dimensions (W×H×D): 136.7 mm×21.5 mm×136.7 mm
Mass: 180 g (with batteries) 157 g (without batteries)
Operational temperature range: 0 °C-40 °C
Rechargeable temperature range: 5 °C-40 °C

Note:
Specifications are subject to change without notice.
Mass and dimensions are approximate.

Matsushita Electric Industrial Co., Ltd.

Web Site: <http://www.panasonic.co.jp/global/>

RQT7830-B

F1104SZ0

Troubleshooting guide

References to the remote control apply only to SL-CT352.

Before requesting service, make the following checks. If you are in doubt about some of the check points, or if the solutions indicated in the chart do not solve the problem, consult your dealer for instructions.

No play.	<ul style="list-style-type: none"> ● The HOLD function is on. Cancel HOLD (↔ page 4). ● The batteries may be depleted (↔ page 3). ● The disc isn't correctly set. ● The disc is scratched or dirty. (Tracks may be skipped.) ● There is moisture on the lens. Wait for about an hour and then try again. ● The lens is dirty: clean it with a blower (recommended product: SZZP1038C). If the lens gets marked with fingerprints, gently wipe them off with a cotton swab.
No sound or there is a lot of noise.	<ul style="list-style-type: none"> ● Ensure the plugs are inserted firmly. ● Wipe the plugs with a clean cloth. ● The disc is scratched or dirty. ● The elapsed play time disappears and sound is interrupted if bumps continue repeatedly.
Play doesn't resume from the track where play stopped at.	<ul style="list-style-type: none"> ● This doesn't work during random play. ● It may not work correctly under some conditions.
Play doesn't start from the first track.	<ul style="list-style-type: none"> ● Random play modes may be on (↔ page 4). ● Play resumes from the track where you last stopped play (↔ page 4, Play). (If the lid is opened while the unit is turned off, the resume function may not be cancelled.)
Cannot specify point A or B.	You may not be able to specify point A or B at the end of a disc.
Cannot change the anti-skip mode.	If [◀◀] or [▶▶] is pressed before [MEMO] you cannot change the mode.
SL-CT352 The unit malfunctions when connected to other equipment.	Be sure to connect other equipment through the remote control. If speakers are connected directly to the unit, they should have an impedance of 1 kΩ or less.
Cannot hear the remote control's operation tone.	The operation tone may be turned off (↔ page 4).
The remote control does not work properly.	<ul style="list-style-type: none"> ● Remove the plug and reinsert it as fully as possible. ● Use only the included remote control to operate the unit.
Cannot recharge.	<ul style="list-style-type: none"> ● You aren't using the special rechargeable batteries (↔ page 3). ● You must insert two batteries before you can charge. ● The unit must be off before you can charge.
The AC adaptor becomes warm during recharging.	This is normal.

The batteries are taking a long time to recharge.	The batteries may take as long as 4.5 hours to recharge under some conditions.
Play time is short after recharging.	<ul style="list-style-type: none"> ● This may occur the first time you charge the batteries or if you haven't used them for a long time. Play time should be restored after a few recharges. ● The batteries can go flat if you leave the AC adaptor connected after charging is complete. ● If play is extremely short even after fully recharging the batteries, the batteries may have exceeded their life (Rechargeable batteries can be recharged approximately 300 times). Please purchase new nickel-metal hydride rechargeable batteries (Europe: HHR-4AGE/2B Other areas: HHR-4AGT/2B).
The battery indicator fails to appear or is incorrect.	<ul style="list-style-type: none"> ● The indicator does not appear when the AC adaptor is connected. ● The indicator may not appear correctly when using the rechargeable and dry cell batteries at the same time and under certain conditions.
The unit stops working.	Disconnect then reconnect all power sources (batteries and AC adaptor).
Power cuts off.	If you connect or disconnect the AC adaptor, the power cuts off even if the batteries are inserted.

Display

hold	The HOLD function is on. Cancel HOLD (↔ page 4).
no disc	<ul style="list-style-type: none"> ● You haven't inserted a disc or it isn't inserted correctly. ● You have inserted a disc this unit cannot play.
open	The disc lid is open.
F	The program already contains 20 tracks.

Maintenance

If the surfaces are dirty wipe with a soft, dry cloth.
● Never use alcohol, paint thinner or benzine to clean this unit.
● Before using chemically treated cloth, read the instructions that came with the cloth carefully.

CAUTION!

- DO NOT INSTALL OR PLACE THIS UNIT IN A BOOKCASE, BUILT-IN CABINET OR IN ANOTHER CONFINED SPACE. ENSURE THE UNIT IS WELL VENTILATED. TO PREVENT RISK OF ELECTRIC SHOCK OR FIRE HAZARD DUE TO OVERHEATING, ENSURE THAT CURTAINS AND ANY OTHER MATERIALS DO NOT OBSTRUCT THE VENTILATION VENTS.
- DO NOT OBSTRUCT THE UNIT'S VENTILATION OPENINGS WITH NEWSPAPERS, TABLECLOTHS, CURTAINS, AND SIMILAR ITEMS.
- DO NOT PLACE SOURCES OF NAKED FLAMES, SUCH AS LIGHTED CANDLES, ON THE UNIT.
- DISPOSE OF BATTERIES IN AN ENVIRONMENTALLY FRIENDLY MANNER.

CAUTION!

THIS PRODUCT UTILIZES A LASER.
USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.
DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

WARNING:

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR PRODUCT DAMAGE, DO NOT EXPOSE THIS APPARATUS TO RAIN, MOISTURE, DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON THE APPARATUS.

Marking sign is located on bottom of the unit.

This product may receive radio interference caused by mobile telephones during use. If such interference is apparent, please increase separation between the product and the mobile telephone.

The socket outlet shall be installed near the equipment and easily accessible or the mains plug or an appliance coupler shall remain readily operable.

THIS UNIT IS INTENDED FOR USE IN MODERATE CLIMATES.

Caution

- Do not expose the unit to direct sunlight or heat, such as from heating appliances, as these can damage the unit.
- Discontinue use if you experience discomfort with the earphones or any other parts that directly contact your skin. Continued use may cause rashes or other allergic reactions.

Batteries

- Do not peel off the covering on batteries and do not use if the covering has been peeled off.
- Align the poles + and - correctly when inserting the batteries.
- Do not mix different types of batteries or old and new batteries.
- Remove the batteries if you do not intend to use the unit for a long time.
- Do not throw into fire, short-circuit, disassemble, or subject to excessive heat.
- Do not attempt to recharge dry cell batteries.
- When carrying batteries in a pocket or bag, ensure no metal objects such as necklaces are placed together with them. Contact with metal may cause short-circuiting which can cause a fire.
- Keep out of the reach of small children. Accidental swallowing of batteries can result in stomach and intestinal damage.

Listening

- Do not play your headphones or earphones at a high volume. Hearing experts advise against continuous extended play.
- If you experience a ringing in your ears, reduce volume or discontinue use.
- Do not use while operating a motorized vehicle. It may create a traffic hazard and is illegal in many areas.
- You should use extreme caution or temporarily discontinue use in potentially hazardous situations.
- Even if your headphones or earphones are the open-air type designed to let you hear outside sounds, don't turn up the volume so high that you can't hear what's around you.

CDs

- Do not use irregularly shaped CDs.
- Do not use non-specification discs.
- Do not use CDs printed with label printers available on the market.
- Do not use CDs with labels and stickers that are coming off or with adhesive exuding from under labels and stickers.

NORSK

ADVARSEL!

- APPARATET MÅ IKKE Plasseres I EN BOKHYLLE, ET INNEBYGGET KABINETT ELLER ET ANNET LUKKET STED HVOR VENTILASJONSFORHOLDENE ER UTILSTREKKELIGE. SØRG FOR AT GARDINER ELLER LIGNENDE IKKE FORVERRER VENTILASJONSFORHOLDENE, SÅ RISIKO FOR ELEKTRISK SJOKK ELLER BRANN FORÅRSAKET AV OVERHETING UNNGÅS.
- APPARATETS VENTILASJONSÅPNINGER MÅ IKKE DEKKES TIL MED AVISER, BORDDUKER, GARDINER OG LIGNENDE.
- PLASSER IKKE ÅPEN ILD, SLIK SOM LEVENDE LYS, OPPÅ APPARATET.
- BRUKTE BATTERIER MÅ KASSERES UTEN FARE FOR MILJØET.

ADVARSEL!

DETTE PRODUKTET ANVENDER EN LASER.
BETJENING AV KONTROLLER, JUSTERINGER ELLER ANDRE INNGREP ENN DE SOM ER BESKREVET I DENNE BRUKSANVISNING, KAN FØRE TIL FARLIG BESTRÅLING.
DEKSLER MÅ IKKE ÅPNES, OG FØRSØK ALDRI Å REPARERE APPARATET PÅ EGENHÅND. ALT SERVICE OG REPARASJONSARBEID MÅ UTFØRES AV KVALIFISERT PERSONELL.

ADVARSEL:

FOR Å REDUSERE FAREN FOR BRANN, ELEKTRISK STØT ELLER SKADER PÅ PRODUKTET, MÅ DETTE APPARATET IKKE UTSETTES FOR REGN, FUKTIGHET, VANNDRÅPER ELLER VANNSPRUT. DET MÅ HELLER IKKE Plasseres GJENSTANDER FYLT MED VANN, SLIK SOM BLOMSTERVASER, OPPÅ APPARATET.

DETTE APPARATET ER BEREKNET TIL BRUK UNDER MODERATE KLIMAFORHOLD.

Utstyret bør plasseres i nærheten av AC-stikkontakten, og støpslet må være lett tilgjengelig hvis det skulle oppstå problemer.

SUOMI

VAROITUS!

- ÄLÄ ASENNATA TAI LAITTA TÄTÄ LAITETTA KABINETTITYYPPISEEN KIRJAKAAPPIIN TAI MUUHUN SULJETTUUN TILAAN, JOTTA TUULETUS ONNISTUISI. VARMISTA, ETTÄ VERHO TAI MIKÄÄN MUU MATERIAALI EI HUONONNA TUULETUSTA, JOTTA VÄLTETTÄISIIN YLIKUUMENEMISESTÄ JOHTUVA SÄHKÖISKU- TAI TULIPALOVAARA.
- ÄLÄ PEITÄ LAITTEEN TUULETUSAUKKOJA SANOMALEHDellä, PÖYTÄLAINALLA, VERHOILLA TAI MUULLA VASTAVALLE ESINEELLÄ.
- ÄLÄ ASETA PALAVAA KYNTTILÄÄ TAI MUUTA AVOTULEN LÄHDETTÄ LAITTEEN PÄÄLE.
- HÄVITÄ PARISTOT LUONTOA VAHINGOITTAMATTOMALLA TAVALLA.

VAROITUS!


LAITTEEN KÄYTTÄMINEN MUULLA KUIN TÄSSÄ KÄYTTÖOHJEESSA MAINITULLA TAVALLA SAATTAA ALTISTAA KÄYTTÄJÄN TURVALLISUUSLUOKAN 1 YLITTÄVÄLLE NÄKYMÄTTÖMÄLLE LASERSÄTEILYLLE.

VAROITUS:

TULIPALO-, SÄHKÖISKUVAARAN TAI TUOTETTA KOHTAAVAN MUUN VAHINGON VÄHENTÄMISEKSI EI LAITETTA SAA ALTISTAA SATEELLE, KOSTEUDELLE, VESIPISAROILLE TAI ROISKEELLE, EIKÄ NESTETTÄ SISÄLTÄVIÄ ESINEITÄ, KUTEN ESIMERKIKSI MALJAKOITA, SAA ASETTAA LAITTEEN PÄÄLE.

TÄMÄ LAITE ON TARKOITETTU KÄYTTETTÄVÄKSI LEUDOSSA ILMASTOSSA.

Laite tulee asettaa lähelle verkkopistorasiaa ja pistokkeen täytyy olla sellaisessa asennossa, että siihen on helppo tarttua ongelman sattuessa.

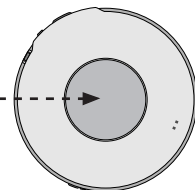

LUOKAN 1 LASERLAITE KLASS 1 LASER APPARAT

ADVARSEL-UTSYNLIG LASERSTRÅLING VED ÅBNING, NÅR SIKKERHEDSFA- YDERE ER UDE AF FUNKTION. UNDGÅ UNSÆTTELSE FOR STRÅLING. VORSICHT-UNSICHTBARE LASERSTR- ÄHLUNG, WEIN ABRECKUNG GEÖFFN- ET UND SICHERHEITSVERRIEGELUNG ÜBERBRÜCKT. NICHT DEM STRAHL AUSSETZEN. DANGER-INVISIBLE LASER RADIAT- ION WHEN OPEN AND INTERLOCK DEFEATED. AVOID DIRECT EXPOSURE TO BEAM. ROL50244	VARO! AVATTAESSA JA SUOJA- KITUS OIHETETÄSSÄ OLET ALTITTA NÄKYMÄTÖNTÄ LASERSÄTEILYLLE. ÄLÄ KÄÄSISÄTEESSEN VARNING-ÖSYNLIG LASERSTRÅL- NING NÅR DENNA DEL ÄR ÖPPNAD OCH SPÄRREN ÄR URKOPPLAD. BETRÄKTA EJ STRÅLEN. ADVARSEL-UTSYNLIG LASERSTRÅL- NING NÅR DEKSEL ÅPNES OG SIKKERHEDSLAS BRYTES, UNNGÅ EKSPONERING FOR STRÅLEN.
---	---

(Inside of product)
(Produktets innside)
(Tuotteen sisällä)

Supplied Accessories

Check the packing carton for these accessories.

Use numbers indicated when asking for replacement parts.
(Product numbers correct as of November 2004. These may be subject to change.)

SL-CT345

- 1 Pair of stereo earphones: LOBAB0000185

SL-CT350

- 1 Pair of stereo earphones: LOBAB0000185

- 1 AC adaptor:

The United Kingdom: RFEA435B-S

Continental Europe: RFEA431E-S

 
Australia and N.Z.: RFEA436A-S

For Australia and N.Z.:

- 1 External battery case: RFA2666-H

SL-CT352 Only for sets purchased in Japan:

- 1 Pair of stereo earphones: LOBAB0000186
- 1 Wired remote control: N2QCB0000010
- 1 AC adaptor: RFEA444Z-S
- 1 External battery case: RFA2666-H
- 1 Power plug adaptor: K2DA42E00001
- 2 Alkaline batteries



If the power plug will not fit your socket, use the power plug adaptor.

For the United Kingdom and Republic of Ireland

Sales and Support Information

Customer Care Centre

- For UK customers: 08705 357357
- For Republic of Ireland customers: 01 289 8333
- Visit our website for product information
- E-mail: customer.care@panasonic.co.uk

Direct Sales at Panasonic UK

- Order accessory and consumable items for your product with ease and confidence by phoning our Customer Care Centre Monday - Friday 9:00am - 5:30pm. (Excluding public holidays)
- Or go on line through our Internet Accessory ordering application at www.panasonic.co.uk
- Most major credit and debit cards accepted.
- All enquiries transactions and distribution facilities are provided directly by Panasonic UK Ltd.
- It couldn't be simpler!
- Also available through our Internet is direct shopping for a wide range of finished products, take a browse on our website for further details.

Connections

References to the remote control apply only to SL-CT352.

Turn off this unit and the other equipment before connection.

Insert each plug fully. (Plug type: 3.5 mm stereo)

When the unit is connected to other equipment, set the unit's volume to 10-15 and adjust the volume on the connected equipment.




The illustration shows SL-CT352.

SL-CT345 SL-CT350

Connect the other equipment directly to the headphone jack (🔊) on the main unit.

SL-CT352

First connect the remote control to the headphone jack (🔊) on the main unit and then connect the other equipment to the remote control jack.

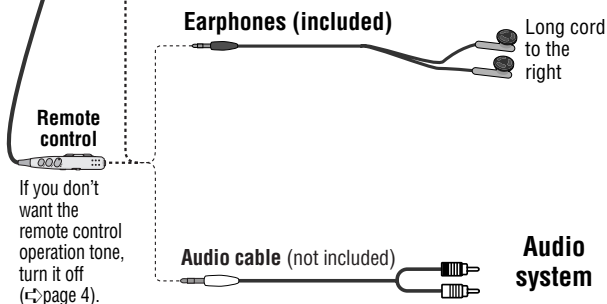

Earphones (included)

Long cord to the right

Remote control

If you don't want the remote control operation tone, turn it off (↔page 4).

Audio cable (not included)

Audio system

To CD or AUX terminals

Power Supply

• Recharging/Play time ↔ page 1, Specifications

• To save power when the unit is not to be used for a long time, unplug the AC adaptor from the household mains socket.

Rechargeable batteries (not included) Charge before initial use.

As a safety precaution this unit is constructed so it is not possible to charge ordinary batteries. For details, check with your dealer.

When charging, use only the following Panasonic Nickel-metal hydride rechargeable batteries.


Europe: HHR-4AGE/2B (set of 2)

Other areas: HHR-4AGT/2B (set of 2)

You cannot charge any other type of rechargeable/dry cell batteries.



Turn the unit off (↔page 4) before charging.

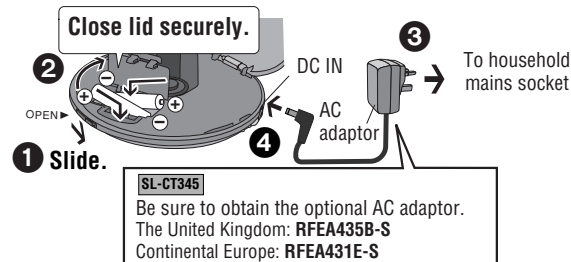

SL-CT345

Be sure to obtain the optional AC adaptor.

The United Kingdom: RFEA435B-S

Continental Europe: RFEA431E-S

- The configuration of the AC adaptor differs according to the area.
- Lift up the ⊕ end when removing.
- The battery indicator "🔋" scrolls while charging and disappears when finished.
- You can charge the batteries before they are fully discharged.
- Fit the battery lid so it is secure and flush with the battery compartment. If it comes loose, it may scratch your discs.

The unit is in the standby condition when the AC adaptor is connected. The primary circuit is always "live" as long as the AC adaptor is connected to an electrical outlet.

Dry cell batteries

Main unit

After disconnecting the AC adaptor, insert two "LR03, AAA, UM-4" alkaline batteries.

Insert in the same way as the rechargeable batteries (↔left).

SL-CT350 (For Australia and N.Z.) SL-CT352

 
External battery case

You can get longer play time by also attaching this case. (The unit will also work when batteries are in the case only.)



The battery indicator

This indicator appears when the unit is on.



- Before play starts the battery indicator level may temporarily go down or flash although the batteries are not drained. It appears correctly once you start play.


 
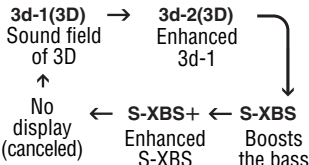
AC adaptor



 
The unit will also work when using the AC adaptor only.

- 3 Connect the AC adaptor (↔left).

Button control guide

References to the remote control apply only to SL-CT352.

Open lid	OPEN ►	Slide in direction of arrow. 
HOLD (function lock)	HOLD ► (Main unit) ⇄ HOLD (Remote control)	Slide in direction of arrow. (Slide in opposite direction to cancel.) • The unit and remote control each have independent HOLD switches.
Play	►/II (Main unit) ■/► (Remote control)	Press.  Current track number Elapsed play time of track • Play begins from the track where you last stopped play (Resume function). (This will be cancelled if you open the lid while play is stopped.)
Skip	►► (Forward) ◀◀ (Backward)	Press. • Press [◀◀] twice consecutively to skip to the previous track during play. • You cannot use [◀◀] to skip to any previous tracks during random and random repeat (⇄right) modes.
Search	►► (Forward) ◀◀ (Backward)	During play, press and hold. • You can only search within the current track except for during all track repeat (⇄right) and regular play.
Volume control (0–25)	VOL + (Increase) – (Decrease)	Press. • The volume returns to 10 when you disconnect the power source.
Pause	►/II (Main unit)	Press. • Press again to restart play.
Stop/Turn off	■ (Main unit) ■/► (Remote control)	Press.  Number of tracks Total play time • Press again to turn the unit off. (Main unit)/ Press and hold to turn the unit off. (Remote control) • If the unit is left in stop mode for approximately 10 minutes, it turns itself off automatically.
Sound quality	EQ	Each time you press [EQ] [Press [EQ] twice consecutively while “3D” is displayed. (Main unit)]  • “3d-1” or “3d-2” disappears after being selected and “3D” appears instead. • The effect may differ with different kinds of music. • Depending on the recording conditions, sound may be interrupted when switching between EQ settings.

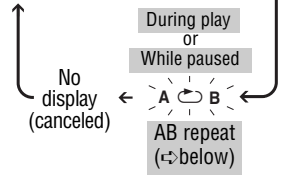Remote control operation tone	EQ (Remote control)	Each time you press and hold [EQ] bP oFF ⇄ bP on Tone off ⇄ Tone on									
Play modes	MODE (Main unit)	Each time you press [MODE] 1 → 2 → 3 → 4 One track repeat → All track repeat → Random track repeat → Random track repeat  ■Specifying the AB segment Press [MEMO] at the start point (A) and once more at the end point (B).  • Stop or skip (⇄left) to cancel. • If you do not specify point B this will automatically be set as the end of the disc. Repeat begins when this point is reached. You can specify point B again by pressing [MEMO].									
Program play (desired tracks only)	MEMO (Main unit)	While stopped, press [◀◀] or [►►] to select the track, then press [MEMO].  Track number Sequence number Will appear after [MEMO] is pressed Repeat to program up to 20 tracks.									
Anti-skip mode		<table border="1"> <tr> <td>Play</td><td>►/II (Main unit) ■/► (Remote control)</td><td>Press after all desired tracks have been programmed.</td></tr> <tr> <td>Confirm tracks selected</td><td>MEMO</td><td>Press during play.</td></tr> <tr> <td>Cancel</td><td>■ (Main unit) ■/► (Remote control)</td><td>Press. (Main unit)/ Press during play. (Remote control) (“M” disappears.)</td></tr> </table> <p>The anti-skip function (ANTI-SKIP SYSTEM) reduces or eliminates skipping caused by vibration. You can change the anti-skip memory time.</p> <p>While stopped, each time you press and hold [MEMO]</p> <p>POS 2 ⇄ POS 1 Sound enhanced mode, 10-second anti-skip memory ⇄ Anti-skip enhanced mode, 45-second anti-skip memory</p>	Play	►/II (Main unit) ■/► (Remote control)	Press after all desired tracks have been programmed.	Confirm tracks selected	MEMO	Press during play.	Cancel	■ (Main unit) ■/► (Remote control)	Press. (Main unit)/ Press during play. (Remote control) (“M” disappears.)
Play	►/II (Main unit) ■/► (Remote control)	Press after all desired tracks have been programmed.									
Confirm tracks selected	MEMO	Press during play.									
Cancel	■ (Main unit) ■/► (Remote control)	Press. (Main unit)/ Press during play. (Remote control) (“M” disappears.)									

Note on CD-R and CD-RW (CD-DA)

For CD-DA format, use a music disc and finalize* it after recording. The unit may not be able to play some discs due to the condition of the recording.

*A process performed after recording that enables CD-R/CD-RW players to play audio CD-R and CD-RW.